

Baseball Loft Style 2



Assembly Instructions

Questions call **501.753.9699**



It's like having your own shop!

Table of Contents:

[Table of Contents:](#)

[Parts Included:](#)

[Tools Needed:](#)

[Step 1 | Position Main Parts in Room](#)

[Step 2 | Attach Back Guardrail to Stairs](#)

[Step 3 | Attach the Large Side Panel](#)

[Step 4 | Attach Scoreboard](#)

[Step 5 | Slide back to the wall](#)

[Step 6 | Add Bookcase and Chest](#)

[Step 7 | Add Front Guardrail.](#)

[Step 8 | Add Twin Slats](#)

[Step 9 | Assembly Lower Bed](#)

[Step 10 | Add Full Slats](#)

[NOTES:](#)

Parts Included:


- Stairs
- Large Side Panel
- Front Guardrail
- Back Guardrail
- Scoreboard
- Chest
- Bookcase
- Full Headboard
- Full Footboard
- Full Side Rails (2)

Tools Needed:

- **Flathead Screwdriver**
- **Phillips Screwdriver (Power screwdriver preferred)**
- **Tape Measure**

Step 1 | Position Main Parts in Room

The stairs are designed to go on the right. You'll have the Large Side Panel on the left. You'll be setting this up about 20" - 24" from the wall. This will give you room to attach the scoreboard later.

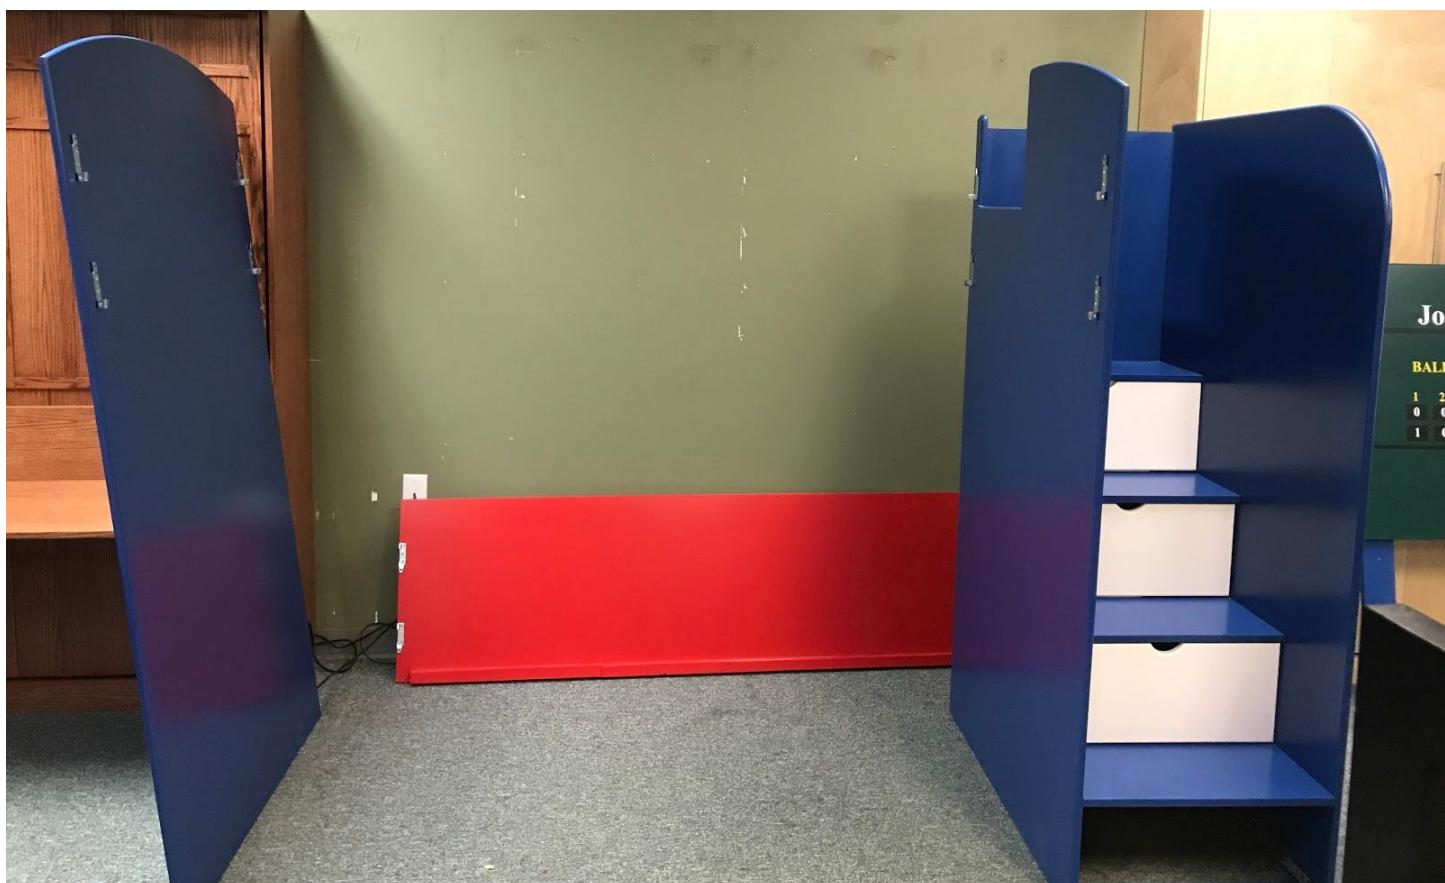

Step 2 | Attach Back Guardrail to Stairs

With a helper attach the Back guardrail to the stairs by locking the brackets together. The tabs on the brackets will interlock.

Put two $\frac{3}{4}$ " set screws in the open holes on each bracket to lock them into place.



Note: If you have trouble getting the tab behind the other brackets tab, a flathead screwdriver may be used to carefully pry it out slightly.



Step 3 | Attach the Large Side Panel

Pull the Large Side Panel into place and lock it into the brackets as was done in step 2. Put two $\frac{3}{4}$ " set screws in the open holes on each bracket to lock them into place.



Step 4 | Attach Scoreboard

The Scoreboard is held on by 2 boards. If they were removed for shipping, put them back on the back of the scoreboard using 1-1/4" screws. With a helper set it on top of the Back Guardrail. Secure using 1-1/4" screw from the back side.



Step 5 | Slide back to the wall

With a helper slide the unit back toward the wall. You may leave a little space between the wall and bed to reach plug in.

Step 6 | Add Bookcase and Chest

The bookcase and chest can go on either side, but we designed them to go on the right side. Slide the bookcase about 1" under the Back Guardrail and put it against the stairs. The Bookcase will be facing inside, toward the Large Side Panel. The chest will fit next to the bookcase but facing outward.



Step 7 | Add Front Guardrail.

Slide the Front Guardrail into place as you did the Back Guardrail in step 2.



Step 8 | Add Twin Slats

The twin size slats for the top bed are tied together and will space themselves out. Set the slats on the cleat of the siderail, stretch into place and attach them to the cleats using 1 ¼" screws.

Step 9 | Assembly Lower Bed

The lower bed uses the same brackets as used on the upper Guardrails. There will only be one on each corner. The Headboard and Footboard are the same size and shape. The only difference is the Footboard has a Cubs logo on it. If you can assemble the lower bed in the middle of the room and then slide it into place that is the easiest. If you are limited with space you can put the Full Headboard in place, under the loft and assemble it there.

Lock the brackets together as you did in step 2 and put 2-¾" set screws in each bracket.

Step 10 | Add Full Slats

The full size slats are not tied together as were on the twin size. Lay those out and evenly space them. Attach them to the cleats using 1 ¼" screws.

NOTES:

To help familiarize you with the features a video was produced for you. It can be found on our Youtube Channel:

<https://youtu.be/qggOPgZS5sQ>

Assembly questions call us at 501.753.9699